

# EOS 5D Mark II

## Pocket Guide

This quick guide explains basic function settings and how to shoot and playback images. You can take this guide with you for shooting. For detailed instructions, refer to the EOS 5D Mark II Instruction Manual.



English Edition  
© CANON INC. 2008

### Quick Start Guide

- 1** Insert the battery.
- 2** Attach the lens. Align the red dot.
- 3** Set the lens focus mode switch to <AF>.
- 4** Open the cover and insert a CF card.
- 5** Set the power switch to <ON>.

- 6** Set the Mode Dial to <Full Auto>. All the necessary camera settings will be set automatically.
- 7** Focus the subject. Aim the AF point over the subject and press the shutter button halfway to autofocus.
- 8** Take the picture. Press the shutter button completely to take the picture.
- 9** View the image. The captured image will be displayed for about 2 sec. on the LCD monitor.
  - The ☆ on the right of the function indicates that the function is available only when the Mode Dial is set to **P**, **Tv**, **Av**, **M**, or **B**.
  - **Battery Life**

Temperature	At 23°C / 73°F	At 0°C / 32°F
Possible shots	Approx. 850 shots	Approx. 750 shots

### Image Playback

Playback  
 Erase  
 Magnify  
 Select image

INFO. Shooting information

### Preparation

#### Menu Operations

- Press the <MENU> button to display the menu.
- Turn the <Main Dial> to select the tab, then turn the <Quick Control Dial> to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

#### Fully-Automatic Modes (P/CA)

**P/Tv/Av/M/B Modes**

Menu items    Menu settings

### Menu Settings

#### Shooting 1

- Quality
- Beep On
- Shoot w/o card On
- Review time 2 sec.
- Peripheral illumin. correct.

#### Shooting 2

- Expo.comp./AEB -2..1..0..1..2
- White balance AWB
- Custom WB 0.0/±0
- Color space sRGB
- Picture Style Standard
- Dust Delete Data

#### Playback 1

- Protect images
- Rotate
- Erase images
- Print order
- Transfer order

#### Playback 2

- Highlight alert Disable
- AF point disp. Disable
- Histogram Brightness
- Slide show
- Image jump w/ 10 images

#### Set-up 1

- Auto power off 1 min.
- Auto rotate On
- Format
- File numbering Continuous
- Select folder

#### Set-up 2

- LCD brightness Auto
- Date/Time 09/17/08 13:10
- Language English
- Video system NTSC
- Sensor cleaning
- Live View/Movie func. set.

#### Set-up 3

- Battery info.
- INFO. button Normal disp.
- External Speedlite control
- Camera user setting
- Clear settings
- Firmware Ver. 1.0.0

#### Custom Functions

- C.Fn I :Exposure
- C.Fn II :Image
- C.Fn III :Autofocus/Drive
- C.Fn IV :Operation/Others
- Clear all Custom Func. (C.Fn)

● All these screens show the options displayed in the **P/Tv/Av/M/B** modes. In the fully-automatic modes (P/CA), the [INFO./★] tab and [▶] are not displayed.

### Quick Control Screen

● Press <Quick Control Dial> straight down. The Quick Control screen will appear.

- Shutter speed
- Exposure compensation/AEB setting
- Shooting mode
- AF point
- Image-recording quality
- Picture Style
- Aperture
- ISO speed
- Highlight tone priority
- Flash exposure compensation
- Metering mode
- Drive mode
- White balance
- AF mode

- Tilt the <Quick Control Dial> to select the function, then turn the <Main Dial> or <Quick Control Dial> to set it.
- In the fully-automatic modes (P/CA), you can select certain drive modes and the image-recording quality.

### Image-recording Quality

- Select [Quality].
- Turn the <Main Dial> or <Quick Control Dial> to select the quality and press <SET>.

#### Image-recording quality

Pixels

Possible shots

RAW: Turn the <Main Dial> to select the quality.

JPEG: Turn the <Quick Control Dial> to select the quality.

#### Picture Style ☆



- Press the <Picture Style button>.
- Turn the <Main Dial> or <Quick Control Dial> to select the Picture Style.

Style	Description
<b>Standard</b>	Vivid colors and sharp images.
<b>Portrait</b>	Nice skin tones and slightly sharp images.
<b>Landscape</b>	Vivid blue skies and greenery and very sharp images.
<b>Monochrome</b>	Black-and-white images.


- For <Neutral> (Neutral) and <Faithful> (Faithful), see the camera's instruction manual.

# Shooting Operation


## Nomenclature

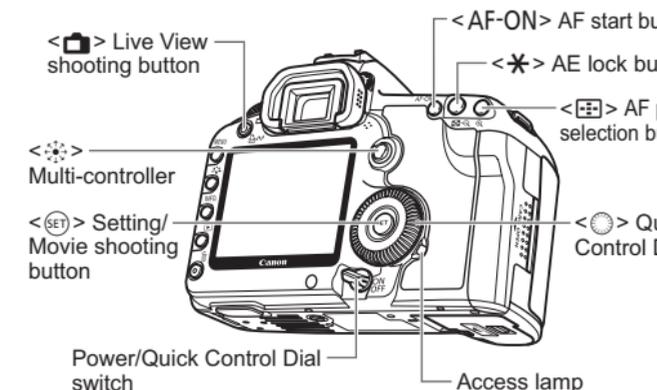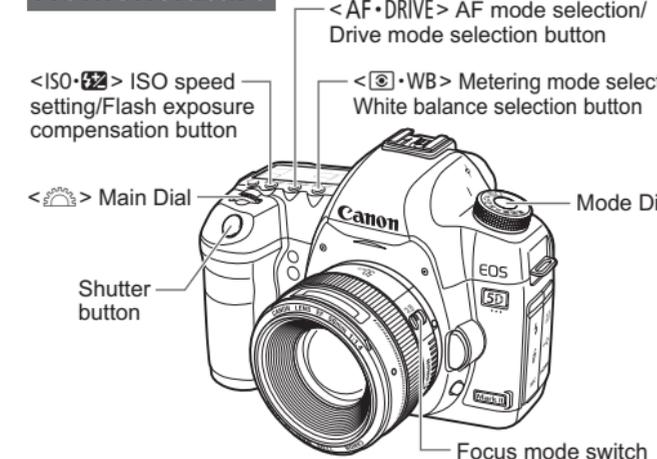


## LCD Panel

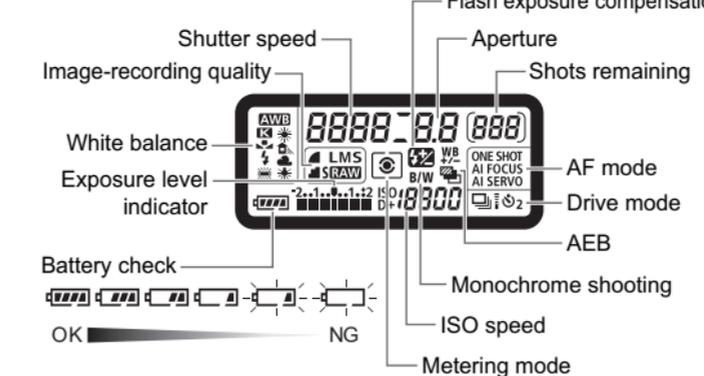

## Viewfinder Information

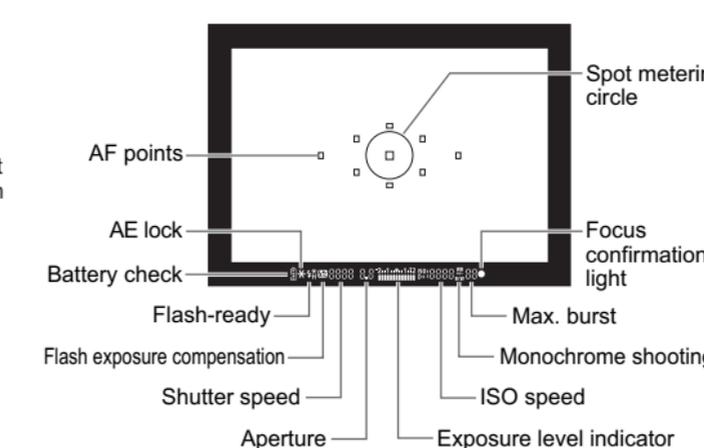


## Fully-Automatic Modes (□/CA)

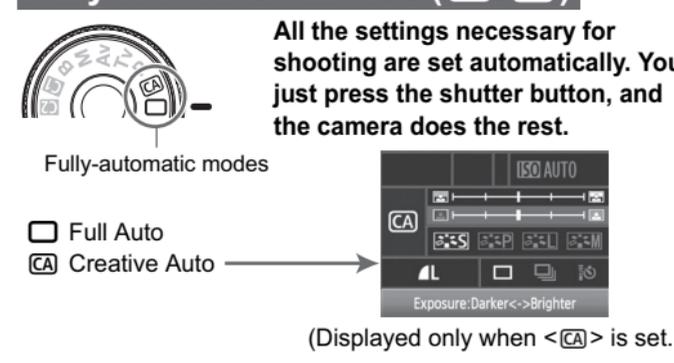

- Press **<AF-ON>** straight down, then tilt **<AF-ON>** to select the function.
- Turn the **<Main Dial>** or **<Quick Control Dial>** to set the function.

## P/Tv/Av/M Modes

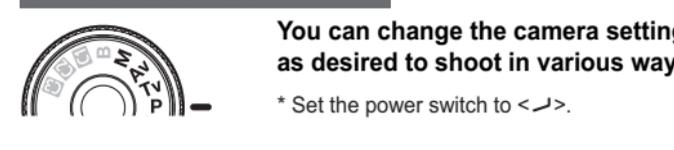


- You can change the camera settings as desired to shoot in various ways.
- \* Set the power switch to **<ON>**.

## P: Program AE


- Set the Mode Dial to **<P>**.
- As with the **<□>** mode, when focus is achieved, the shutter speed and aperture will be automatically set.

## Tv: Shutter-priority AE

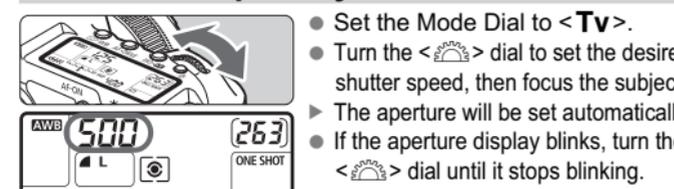


- Set the Mode Dial to **<Tv>**.
- Turn the **<Main Dial>** to set the desired shutter speed, then focus the subject.
- ▶ The aperture will be set automatically.
- If the aperture display blinks, turn the **<Main Dial>** until it stops blinking.

## Av: Aperture-priority AE

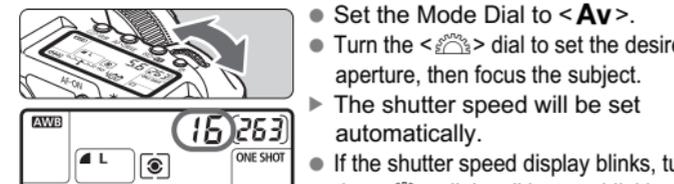


- Set the Mode Dial to **<Av>**.
- Turn the **<Main Dial>** to set the desired aperture, then focus the subject.
- ▶ The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the **<Main Dial>** until it stops blinking.

## M: Manual Exposure

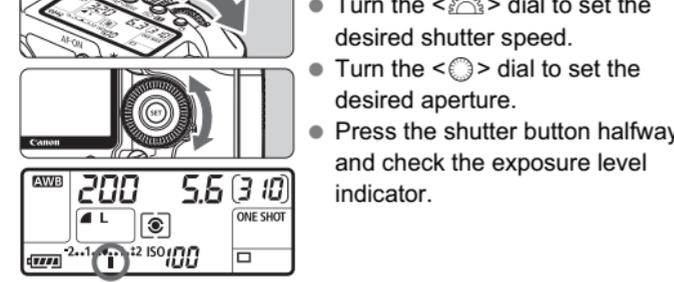

- Set the Mode Dial to **<M>**.
- Turn the **<Main Dial>** to set the desired shutter speed.
- Turn the **<Quick Control Dial>** to set the desired aperture.
- Press the shutter button halfway and check the exposure level indicator.

## AF: AF Mode ☆

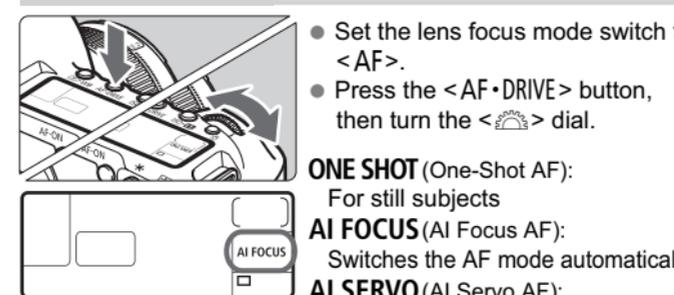

- Set the lens focus mode switch to **<AF>**.
- Press the **<AF-DRIVE>** button, then turn the **<Main Dial>**.

## ONE SHOT (One-Shot AF):

For still subjects


## AI FOCUS (AI Focus AF):

Switches the AF mode automatically

## AI SERVO (AI Servo AF):


For moving subjects

## AF Point ☆

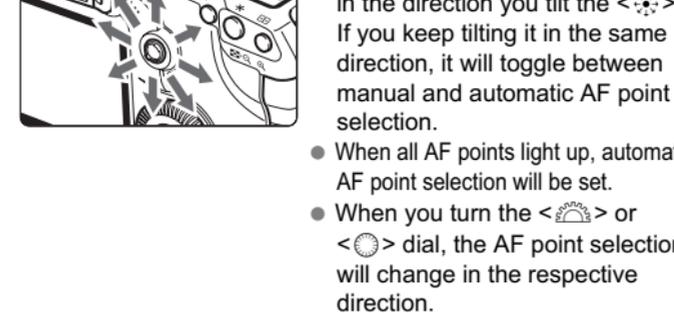


- Press the **<AF Point Selection Button>**, then look through the viewfinder.
- The AF point selection will change in the direction you tilt the **<AF Point Selection Button>**. If you keep tilting it in the same direction, it will toggle between manual and automatic AF point selection.
- When all AF points light up, automatic AF point selection will be set.
- When you turn the **<Main Dial>** or **<Quick Control Dial>** to change in the respective direction.

## ISO: ISO Speed ☆

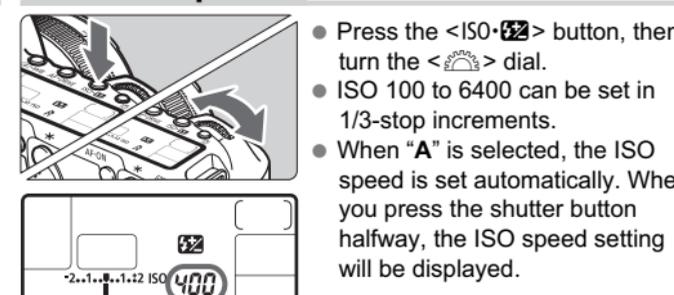

- Press the **<ISO>** button, then turn the **<Main Dial>**.
- ISO 100 to 6400 can be set in 1/3-stop increments.
- When **"A"** is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.

## Drive Mode ☆

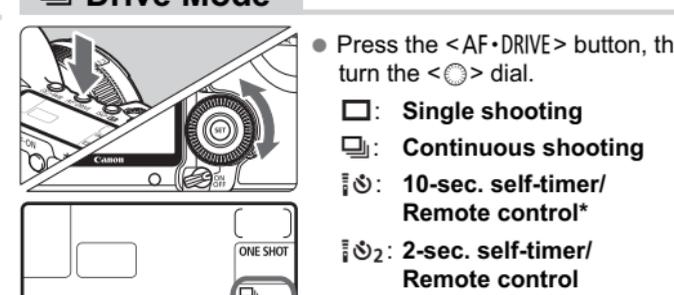

- Press the **<AF-DRIVE>** button, then turn the **<Quick Control Dial>**.

## □: Single shooting


## ☰: Continuous shooting

## ⌚: 10-sec. self-timer/Remote control\*

## ⌚2: 2-sec. self-timer/Remote control

\* This drive mode **<⌚2>** can be set in all shooting modes.

## Live View Shooting

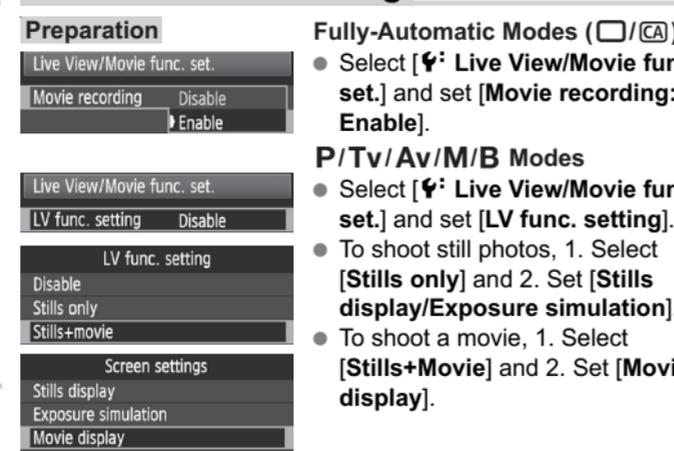

## Preparation

Live View/Movie func. set.

Movie recording Disable

Enable

LV func. setting Disable

Stills only

Stills+movie

Screen settings

Stills display

Exposure simulation

Movie display

## Shooting stills/movies

For stills

For movies

- Select **[Live View/Movie func. set.]** and set **[Movie recording: Enable]**.
- Select **[Live View/Movie func. set.]** and set **[LV func. setting]**.
- To shoot still photos, 1. Select **[Stills only]** and 2. Set **[Stills display/Exposure simulation]**.
- To shoot a movie, 1. Select **[Stills+Movie]** and 2. Set **[Movie display]**.
- Press the **<Live View button>** to display the Live View image.
- Press the **<AF-ON>** button to focus the subject.
- Press the shutter button to take a still photo.
- If **[Movie recording: Enable]** or **[Stills+movie]** is set, press **<SET>** to start shooting a movie. To stop shooting the movie, press **<SET>** again.
- While shooting a movie, you can also take a still photo by pressing the shutter button.

# Custom Functions

## C.Fn I: Exposure

1	Exposure level increments	2	Lens AF stop button function
2	ISO speed setting increments	3	AF point selection method
3	ISO expansion	4	Superimposed display
4	Bracketing auto cancel	5	AF-assist beam firing
5	Bracketing sequence	6	Mirror lockup
6	Safety shift	7	AF point area expansion
7	Flash sync. speed in Av mode	8	AF Microadjustment

## C.Fn II: Image

1	Long exposure noise reduction	2	AF-ON/AE lock button switch
2	High ISO speed noise reduction	3	Assign SET button
3	Highlight tone priority	4	Dial direction during Tv/Av
4	Auto Lighting Optimizer	5	Focusing screen

## C.Fn III: Autofocus/Drive

1	Lens drive when AF impossible
---	-------------------------------

## C.Fn IV: Operation/Others

1	Shutter button/AF-ON button
2	AF-ON/AE lock button switch
3	Assign SET button
4	Dial direction during Tv/Av
5	Focusing screen
6	Add original decision data